

 
 





 
 

 

 




 
 
 
 






 








Original	Replacement
POWER	Power
INFO	Info / Angle
HDMI CONTROL	Smart / List
SLEEP	Sleep / Timer
SCREEN	Picture / Format
SOURCE	AV / Input / RDS
PRESETS	Setup / OPT /
1	1
2	2
3	3
ZOOM/RED/▲	Zoom / Size
ZOOM/RED/▲	Shift + CH+ /
ZOOM/RED/▲	Red / Netflix / Search
4	4
5	5
6	6
REPEAT/GREEN/▼	Shift + CH- / Page-

Original	Replacement
REPEAT/GREEN/▼	Green / APP / Repeat
7	7
8	8
9	9
ROOT/YELLOW	Yellow / YouTube / Repeat
RETURN	Back / Return
0	0
MENU	Menu / Home
TITLE/BUE	Sound / Title
TITLE/BUE	Blue / Prime Video / Random
UP	Up
LEFT	Left
OK/SELECT	OK
RIGHT	Right
DOWN	Down
P+	CH+ / Page+
P-	CH- / Page-





Original	Replacement
	VOL  Vol-
	VOL  Vol+
	PC FAV MARKER  Fav / Marker / PC
	LANG I/II  Audio / Lang I/II
	EQ  Subtitle / EQ
	DIMMER MUTE  Mute / Dimmer
	SHIFT  + RETURN  BACK  Shift + Back / Return
	GUIDE EPG  Guide / EPG / -/-
	TOP MENU D.MENU  D.Menu / Top
	GOTO TEXT  Text / Goto
	CLEAR  EXIT  CANCEL  Exit / Cancel / Clear
	MEDIA DISPLAY  Display / Media
	SHIFT  + ANGLE  INFO  Shift + Info / Angle
	SHIFT  + NETFLIX  SEARCH  Shift + Red / Netflix /
	REC MODE  Rec / Rec Mode
	HOLD  Stop / Hold
	SLOW  Play / Slow

Original	Replacement
	STEP - FREEZE  Pause / Step / Freeze
	TUNE-  << / Tune-
	TUNE+  >> / Tune+
	PRESET-  I<< / Preset-
	PRESET+  >>I / Preset+

