



Original	Replacement	Original	Replacement
 Power	 Power	 Netflix	 Shift + Red / Netflix /
 Mute	 Mute / Dimmer	 Menu	 Menu / Home
 1	 1	 Source	 AV / Input / RDS
 2	 2	 Up	 Up
 3	 3	 Left	 Left
 4	 4	 OK	 OK
 5	 5	 Right	 Right
 6	 6	 Down	 Down
 7	 7	 Return	 Back / Return
 8	 8	 Exit	 Exit / Cancel / Clear
 9	 9	 Vol+	 Vol+
 0	 Guide / EPG / -/--	 Vol-	 Vol-
 Recall	 0	 Aspect	 Zoom / Size
 YouTube	 Fav / Marker / PC	 CH+	 CH+ / Page+
 Vudu	 Shift + Yellow / YouTube /	 CH-	 CH- / Page-
 Pandora	 Shift + Green / APP /	 TV	 TV/Radio /
	 Shift + Blue / Prime Video /	 << / Tune-	 << / Tune-
	 Random		





Original	Replacement
Play	Play / Slow
Pause	Pause / Step / Freeze
>>	>> / Tune+
I<<	I<< / Preset-
Stop	Stop / Hold
>>I	>>I / Preset+
Red/Info	Red / Netflix / Search
Green/Freeze	Green / APP / Repeat
Yellow/ADD/Erase	Yellow / YouTube / Repeat
Blue/FAV	Blue / Prime Video / Random
V-Chip	Eject / Surround
CC	Subtitle / EQ
MTS	Info / Angle
P.Mode	Picture / Format
S.Mode	Sound / Title
CH.List	Smart / List

Original	Replacement

