



Original		Replacement		Original		Replacement	
	Power		Power		9		9
	Sleep		Sleep / Timer		EPG		Guide / EPG / -/-
	Screen		Picture / Format		0		0
	Presets		Setup / OPT /		SWAP		Fav / Marker / PC
	↔		TV/Radio /		Photo/Music/Movi		D.Menu / Top
	FAV		Shift + Fav / Marker / PC		World		Smart / List
	Lang		Audio / Lang I/II		Source		AV / Input / RDS
	Subtitle		Subtitle / EQ		Menu		Menu / Home
	TXT		Text / Goto		Up		Up
	1		1		Left		Left
	2		2		OK		OK
	3		3		Right		Right
	4		4		Down		Down
	5		5		C		Exit / Cancel / Clear
	6		6		Disp.		Display / Media
	7		7		Search Mode		Shift + Red / Netflix /
	8		8		Return		Back / Return





	Original	Replacement		Original	Replacement
	CH+	 CH+ / Page+		Yellow/Root	 Yellow / YouTube / Repeat
	Info	 Info / Angle		Blue/Title	 Blue / Prime Video / Random
	Vol+	 Vol+			
	CH-	 CH- / Page-			
	Mute	 Mute / Dimmer			
	Vol-	 Vol-			
	Rec	 Rec / Rec Mode			
	Pause	 Pause / Step / Freeze			
	I<<	 I<< / Preset-			
	>>I	 >>I / Preset+			
	<<	 << / Tune-			
	Play	 Play / Slow			
	Stop	 Stop / Hold			
	>>	 >> / Tune+			
	Red/↑/Zoom	 Red / Netflix / Search			
	Red/↑/Zoom	 Zoom / Size			
	Green/↓/Repeat	 Green / APP / Repeat			

