




 


 




 

 


 

 
 





 














 

 

 

 

 









| Original   | Replacement   | Original  | Replacement   |
|--|---|---|---|
|  AUX              |  1       |  A/B/C/D/E Tuner |  Smart   |
|  Tape             |  2       |  << CD           |  <<      |
|  Tuner            |  3       |  >> CD           |  >>      |
|  CD               |  4       |  Disc CD         |  List    |
|  Phono            |  5       |  Play CD         |  Play    |
|  |  6       |  I<< CD          |  I<<     |
|  |  7       |  >>I CD          |  >>I     |
|  Dir A Tape       |  Menu    |  Pause/Stop CD   |  Stop    |
|  Dir B Tape       |  Info    |  Sleep           |  Sleep   |
|  Rec/Pause Tape   |  Up      |  Power           |  Power   |
|  Play Tape      |  Ok    |  Volume-       |  Vol - |
|  Stop Tape      |  Down  |  Volume+       |  Vol + |
|  << Tape        |  Left  |   |   |
|  >> Tape        |  Right |   |   |
|  A/B Tape       |  Exit  |   |   |
|  Preset - Tuner |  Ch -  |   |   |
|  Preset + Tuner |  Ch +  |   |   |

