

 




 



 
 
 


 
 





 
 

 





 



 

 


 
 



 

 
 
 

 

 

 
 
 





 

 

 




Original		Replacement		Original		Replacement	
	Power		Power		Classical		1
	Standby	 + 	Shift + Power		Live/Club		2
	Volume+		Vol +		Entertain		3
	Volume-		Vol -		Movie		4
	Mute		Mute		Stereo		5
	Up / Preset/CH+		Up		Enhancer		6
	Down / Preset/CH-		Down		Sur.Decode		7
	Right /		Right		Parameter		8
	Left / A/B/C/D/E-		Left		Multi CH In		9
	Menu/Set Menu/Srch Mode		Menu		0		0
	Enter		Ok		Sleep		Pre Ch
	Return/Memory		Back		<</Info		<<
	Title/Level/Band		TV/R		>>/Eon		>>
	Display		Info		I<</Mode PTY		I<<
	Audio		Dual		>>I/PTY Seek		>>I
	Pure Direct		Smart		Scene 1		Red
	Straight		Media		Scene 2		Green





Original	Replacement
Scene 3	Yellow
Scene 4	Blue
Tuner	Shift + 1
C	Shift + Yellow
V-AUX/Dock	Shift + 3
DTV/CBL	Shift + 4
CD	Shift + 5
MD/CD-R	Shift + 6
DVD	Shift + 7
DVR	Shift + 8
VCR	Shift + 9
Phono	Shift + Pre Ch

Original	Replacement





Original		Replacement		Original		Replacement	
	Power		Power		5		5
	Volume+		Vol +		6		6
	Volume-		Vol -		7		7
	Mute		Mute		8		8
	Band		TV/R		9		9
	Search Mode		AV		0		0
	Memory		Back		ENT		Pre Ch
	Preset Up		Up		Info		Red
	Preset Down		Down		PTY Seek Start		Blue
	Right A/B/C/D/E		Right		Eon		Green
	Left A/B/C/D/E		Left		Mode PTY Seek		Yellow
	Enter		Ok		Power		Shift + Power
	Display		Info		Up V-AUX/Dock		Shift + Up
	1		1		Down		Shift + Down
	2		2		Right V-AUX/Dock		Shift + Right
	3		3		Left		Shift + Left
	4		4		Enter V-AUX/Dock		Shift + Ok





Original	Replacement
Audio V-AUX/Dock	Dual
Display	Shift + Info
Return	Shift + Back
Menu	Menu
Title V-AUX/Dock	Shift + TV/R
1 V-AUX/Dock	Shift + 1
2 V-AUX/Dock	Shift + 2
3 V-AUX/Dock	Shift + 3
4 V-AUX/Dock	Shift + 4
5 V-AUX/Dock	Shift + 5
6 V-AUX/Dock	Shift + 6
7 V-AUX/Dock	Shift + 7
8 V-AUX/Dock	Shift + 8
9 V-AUX/Dock	Shift + 9
0 V-AUX/Dock	Shift + 0
+10	Shift + Guide
ENT	Shift + Pre Ch





Original	Replacement
<< V-AUX/Dock	<<
<<	<<
>>	>>
>> V-AUX/Dock	>>
Rec V-AUX/Dock	Rec
Stop	Stop
Pause	Pause
Play	Play



V-AUX/Dock









Original	Replacement
 Power	 Power
 Standby	 Shift + Power
 Tuner	 1
 C	 Yellow
 V-AUX/Dock	 3
 DTV/CBL	 4
 CD	 5
 MD/CD-R	 6
 DVD	 7
 DVR	 8
 VCR	 9
 Phono	 Pre Ch
 Volume+	 Vol +
 Volume-	 Vol -
 Mute	 Mute
 <</Info	 <<
 >>/Eon	 >>

Original	Replacement
 I<</Mode PTY	 I<<
 >>/PTYSeek	 >>I





Original	Replacement
 Power	 Power
 Standby	 Shift + Power
 Tuner	 1
 C	 Yellow
 V-AUX/Dock	 3
 DTV/CBL	 4
 CD	 5
 DVD	 7
 DVR	 8
 VCR	 9
 Phono	 Pre Ch
 Volume+	 Vol +
 Volume-	 Vol -
 Mute	 Mute
 <</Info	 <<
 >>/Eon	 >>
 I<</Mode PTY	 I<<

Original	Replacement
 >>I/PTY Seek	 >>I



Seek