



Original	Replacement	Original	Replacement
Power	Power	-/--	Shift + Guide / EPG / -/--
Mute	Mute / Dimmer	Jump	Smart / List
Source	AV / Input / RDS	Menu	Menu / Home
P.Mode	Picture / Format	Info	Info / Angle
S.Mode	Sound / Title	Sleep	Sleep / Timer
I/II/Audio	Audio / Lang I/II	Exit	Exit / Cancel / Clear
P.Size	Zoom / Size	Up	Up
1	1	Left	Left
2	2	Enter	OK
3	3	Right	Right
4	4	Down	Down
5	5	Vol+	Vol+
6	6	Vol-	Vol-
7	7	P-	CH- / Page-
8	8	P+	CH+ / Page+
9	9	Red/D.Setup	Red / Netflix / Search
0	0	Red/D.Setup	Setup / OPT /





Original	Replacement
REPEAT Green/Repeat	Green / APP / Repeat
ZOOM Yellow/Zoom	Yellow / YouTube / Repeat
ZOOM Yellow/Zoom	Shift + Zoom /
GOTO Blue/Goto	Blue / Prime Video / Random
GOTO Blue/Goto	Shift + Text /
FAV.CH [≡i]/FAV.CH	Fav / Marker / PC
FREEZE [≡?]/Freeze	Shift + Pause / Step /
USB/SD [≡♦]/USB/SD	Shift + 8
TV/RADIO [≡+]/Tv/Radio	TV/Radio /
Rec Rec	Rec / Rec Mode
Stop Stop	Stop / Hold
Open/Close Eject / Surround	Eject / Surround
Play Play / Slow	Play / Slow
Pause Pause / Step / Freeze	Pause / Step / Freeze
<<< <<< / Tune-	<<< / Tune-
>>> >>> / Tune+	>>> / Tune+
I<<< I<<< / Preset-	I<<< / Preset-

Original	Replacement
>>I >>I	>>I / Preset+
DVD Menu DVD Menu	D.Menu / Top
Text Text	Text / Goto
Subtitle Subtitle	Subtitle / EQ
Guide Guide	Guide / EPG / -/-

