



Original	Replacement	Original	Replacement
Power	Power	-/--	Shift + Guide / EPG / -/--
Mute	Mute / Dimmer	Jump	Smart / List
Source	AV / Input / RDS	Menu	Menu / Home
P.Mode	Picture / Format	Info	Info / Angle
S.Mode	Sound / Title	Sleep	Sleep / Timer
I/II/Audio	Audio / Lang I/II	Exit	Exit / Cancel / Clear
P.Size	Zoom / Size	Up	Up
1	1	Left	Left
2	2	Enter	OK
3	3	Right	Right
4	4	Down	Down
5	5	Vol+	Vol+
6	6	Vol-	Vol-
7	7	P-	CH- / Page-
8	8	P+	CH+ / Page+
9	9	Red/D.Setup	Red / Netflix / Search
0	0	Red/D.Setup	Setup / OPT /





Original	Replacement	Original	Replacement
 Green/Repeat	 Green / APP / Repeat	 >>	 >> / Preset+
 Yellow/Zoom	 Yellow / YouTube / Repeat	 DVD Menu	 D.Menu / Top
 Yellow/Zoom	 +  Shift + Zoom /	 Text	 Text / Goto
 Blue/Goto	 Blue / Prime Video / Random	 Subtitle	 Subtitle / EQ
 Blue/Goto	 +  Shift + Text /	 Guide	 Guide / EPG / -/-
 [≡i]/FAV.CH	 Fav / Marker / PC		
 [≡?]/Freeze	 +  Shift + Pause / Step /		
 [≡♦]/USB/SD	 +  Shift + 8		
 [≡+] /Tv/Radio	 TV/Radio /		
 Rec	 Rec / Rec Mode		
 Stop	 Stop / Hold		
 Open/Close	 Eject / Surround		
 Play	 Play / Slow		
 Pause	 Pause / Step / Freeze		
 <<	 << / Tune-		
 >>	 >> / Tune+		
 <<	 << / Preset-		

