



 





















 



 





 



 

 
















 








Original	Replacement	Original	Replacement
	Power		Power
	Info		Info / Angle
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Source		AV / Input / RDS
	0		0
	Audio I/II		Audio / Lang I/II
	Menu		Menu / Home
	Exit		Exit / Cancel / Clear

Original	Replacement	Original	Replacement
	Up		Up
	Left		Left
	Enter		OK
	Right		Right
	Down		Down
	CH +		CH+ / Page+
	Index		Display / Media
	Vol +		Vol+
	CH -		CH- / Page-
	List		Smart / List
	Vol -		Vol-
	Fav		Fav / Marker / PC
	Sleep		Sleep / Timer
	EPG		Guide / EPG / -/-
	Recall		Back / Return
	Red / <<		<< / Tune-
	Red / <<		Red / Netflix / Search

















 
 

 


 










Original	Replacement	Original	Replacement
 Green / >>>	 >>> / Tune+		
 Green / >>>	 Green / APP / Repeat		
 Yellow / I<<<	 I<<< / Preset-		
 Yellow / I<<<	 Yellow / YouTube / Repeat		
 Blue / >>>I	 >>>I / Preset+		
 Blue / >>>I	 Blue / Prime Video / Random		
 Text / Play/Pause	 Text / Goto		
 Text / Play/Pause	 Play / Slow		
 Text / Play/Pause	 Pause / Step / Freeze		
 Stop / Still	 Stop / Hold		
 Radio	 TV/Radio /		
 Size / Aspect	 Picture / Format		
 Size / Aspect	 Zoom / Size		
 [≡x]	 Eject / Surround		
 Subtitle / [≡o]	 Subtitle / EQ		
 DMP	 D.Menu / Top		
 Rec	 Rec / Rec Mode		





Original	Replacement	Original	Replacement
 Power	 Power	 Up	 Up
 Info	 Info / Angle	 Left	 Left
 Mute	 Mute / Dimmer	 Enter	 OK
 1	 1	 Right	 Right
 2	 2	 Down	 Down
 3	 3	 CH+	 CH+ / Page+
 4	 4	 Index	 Display / Media
 5	 5	 Vol+	 Vol+
 6	 6	 CH-	 CH- / Page-
 7	 7	 List	 Smart / List
 8	 8	 Vol-	 Vol-
 9	 9	 Fav / Marker / PC	 Fav / Marker / PC
 Source	 AV / Input / RDS	 Sleep	 Sleep / Timer
 0	 0	 EPG	 Guide / EPG / -/-
 O)/I-II/Audio	 Audio / Lang I/II	 Recall	 Back / Return
 Menu	 Menu / Home	 Red	 Red / Netflix / Search
 Exit	 Exit / Cancel / Clear	 <<	 << / Tune-





Original	Replacement	Original	Replacement
	Green 		
	>> 		
	Yellow 		
	I<< 		
	Blue 		
	>>I 		
	[≡] 		
	Play 		
	Pause 		
	[≡+] 		
	Stop/Still 		
	Radio 		
	[≡♦]/[++] 		
	[≡x] 		
	[≡o]/Subtitle 		
	DMP 		
	Rec 		

