








 





Original	Sustituto	Original	Sustituto
	POWER		Power
	←○		Shift + Smart / List
	**/Ö		Shift + Display / Media
	*²/♀		Shift + Red / Netflix /
	SOURCE		AV / Input / RDS
	PRESETS		Smart / List
	≡≡		Setup / OPT /
	♪/☺/▣		Display / Media
	SLEEP		Sleep / Timer
	1 . /@		1
	2 abc		2
	3 def		3
	4 ghi		4
	5 jkl		5
	6 mno		6
	7 pqrs		7
	8 tuv		8
	9 wxyz		9
	TV		TV/Radio /
	0		0
	↔		Shift + Back / Return
	TV GUIDE		Guide / EPG / -/-
	[≡]		Text / Goto
	MENU		Menu / Home
	Q.MENU		D.Menu / Top
	UP		Up
	LEFT		Left
	OK		OK
	RIGHT		Right
	DOWN		Down
	BACK		Back / Return
	→◻←		Picture / Format
	EXIT		Exit / Cancel / Clear
	*FAV		Fav / Marker / PC





Original	Sustituto
VOL+	Vol+
MUTE	Mute / Dimmer
P+	CH+ / Page+
VOL-	Vol-
INFO	Info / Angle
P-	CH- / Page-
REC	Rec / Rec Mode
PLAY	Play / Slow
PAUSE	Pause / Step / Freeze
STOP	Stop / Hold
LANG.	Audio / Lang I/II
<<	<< / Tune-
>>	>> / Tune+
[≡]...	Sound / Title
RED	Red / Netflix / Search
GREEN	Green / APP / Repeat
YELLOW	Yellow / YouTube / Repeat

Original	Sustituto
BLUE	Blue / Prime Video / Random

