



Original	Sustituto	Original	Sustituto
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Source		AV
	ATV/DTV/Content Menu		Smart
	Vol+		Vol +
	Vol-		Vol -
	P+		Ch +
	P-		Ch -

Original	Sustituto	Original	Sustituto
	Mute		Mute
	Guide/Top		Media
	Exit/Return		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Menu/DVD		Menu
	Tv/FAV/Radio/Set		TV/R
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	[<>]		Format
	←[/]→		3D
	Subtitle		Subt

 





 

 

 
 

 

 
 

 

 
 
 

 



 

 

 





 

 
 
 

 


 
 
 
 

 









 

 
 
 





	Original	Sustituto	Original	Sustituto
	Text	Text		
	II/II>/[▼]	Pause		
	[i+]/[≡i]	Info		
	O)I/II	Dual		
	Stop	Stop		
	Play/[≡o]	Play		
	Eject	Eject		
	I<</[≡?]	I<<		
	<</[≡+]	<<		
	>>/[≡♦]	>>		
	>>I/[O]/[≡X]	>>I		
	AD	Shift + Subt		
	Audio	Shift + Dual		





Original	Sustituto	Original	Sustituto
	←[/]→		3D
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Source		AV
	Mute		Mute
	Vol+		Vol +
	Vol-		Vol -
	Exit/Return		Exit
	Menu/DVD		Menu
	Tv/FAV/Radio/Set		TV/R
	Guide/Top		Guide
	[<>]		Format
	Text		Text
	Subtitle		Subt
	O)/II		Dual
	[i+]/[≡i]		Info
	OK		Ok
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	II/II>/[▼]		Pause
	Play/[≡o]		Play
	Stop		Stop
	Eject		Eject



 







 

 





 
 

 
 
 
 

 


 








 

 

 


Original	Sustituto	Original	Sustituto
	I<</[≡?]		I<<
	<</[≡+]		<<
	>>/[≡◆]		>>
	>> /[O]/[≡X]		>>
AUDIO TEXT	+ Shift + Dual		





Original	Sustituto
 Power	 Power
 ←[/]→	 3D
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Source	 AV
 ATV/DTV/Content Menu	 Smart
 Vol+	 Vol +
 Vol-	 Vol -
 P+	 Ch +

Original	Sustituto
 P-	 Ch -
 Mute	 Mute
 Guide/Top	 Guide
 Exit/Return	 Exit
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 Menu/DVD	 Menu
 Tv/FAV/Radio/Set	 TV/R
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 Text	 Text
 [<>]	 Format





Original	Sustituto
[i+]/[≡i]	DISPLAY INFO Info
II/II>/[▼]	Pause
Subtitle	AD SUBT Subt
O)I/II	SOUND DUAL Dual
Play/[≡o]	PLAY MODE Play
Stop	Stop
Eject	ZOOM Eject
I<</[≡?]	I<<
<</[≡+]	<<
>>/[≡◇]	>>
>>I/[O]/[≡X]	>>I
Audio	+ SOUND DUAL Shift + Dual
AD	+ AD SUBT Shift + Subt

Original	Sustituto

