








 



















Original	Sustituto
	Power
	Source
	1
	2
	3
	4
	5
	6
	7
	8
	9
	List
	0
	Info
	Vol+
	Mute
	P+

Original	Sustituto
	Power
	AV / Input / RDS
	1
	2
	3
	4
	5
	6
	7
	8
	9
	Smart / List
	0
	Info / Angle
	Vol+
	Mute / Dimmer
	CH+ / Page+

Original	Sustituto
	Vol-
	Home
	P-
	Back
	Exit
	Up
	Left
	OK
	Wheel Up
	Right
	Wheel Down
	Down
	Guide
	3D
	*/Settings
	Red
	Green

Original	Sustituto
	Vol-
	Menu / Home
	CH- / Page-
	Back / Return
	Exit / Cancel / Clear
	>>I / Preset+
	I<< / Preset-
	Guide / EPG / -/-
	Shift + 3
	D.Menu / Top
	Red / Netflix / Search
	Green / APP / Repeat



