









 

 

 

 



 

 












 








 
 
















Original	Sustituto
 Power	 Power
 Mute	 Mute / Dimmer
 TV System	 TV/Radio /
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Goto	 Text / Goto
 0	 0
 Home	 Menu / Home
 <</FR	 << / Tune-
 >>/FF	 >> / Tune+

Original	Sustituto
 Return	 Back / Return
 Setup	 Setup / OPT /
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 I<</Prev	 I<< / Preset-
 Down	 Down
 Vol+	 Vol+
 >>I/Next	 >>I / Preset+
 Vol-	 Vol-
 Option	 Shift + Setup / OPT / Tools
 Stop	 Stop / Hold
 Pause	 Pause / Step / Freeze
 Play	 Play / Slow
 Repeat	 Shift + Green / APP /
 Copy	 Display / Media





	Original	Sustituto	
	Select	 Smart / List	
	Confirm	 Fav / Marker / PC	
	Info	 Info / Angle	
	Subtitle	 Subtitle / EQ	
	Slow	 +  Shift + Play /	
	Audio	 Audio / Lang I/II	
	Zoom	 Zoom / Size	
	Red/All	 Red / Netflix / Search	
	Blue/Music	 Blue / Prime Video / Random	
	Green/Photo	 Green / APP / Repeat	
	Yellow/Movie	 Yellow / YouTube / Repeat	

	Original	Sustituto

