









 








 


 















 
 











 

 











Original	Sustituto	Original	Sustituto
	Power		Power
	Sleep		Sleep / Timer
	Screen		Picture / Format
	Presets		Setup / OPT /
	↔		TV/Radio /
	FAV		Shift + Fav / Marker / PC
	Lang		Audio / Lang I/II
	Subtitle		Subtitle / EQ
	TXT		Text / Goto
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	EPG		Guide / EPG / -/-
	0		0
	Swap		Fav / Marker / PC
	Photo/Music/Movi		D.Menu / Top
	World		Smart / List
	Source		AV / Input / RDS
	Menu		Menu / Home
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	C		Exit / Cancel / Clear
	Disp.		Display / Media
	Search Mode		Shift + Red / Netflix /
	Return		Back / Return





Original	Sustituto
	CH+ / Page+
	INFO / Angle
	Vol+
	CH- / Page-
	Mute / Dimmer
	Vol-
	Rec / Rec Mode
	Pause / Step / Freeze
	I<< / Preset-
	>>I / Preset+
	<< / Tune-
	Play / Slow
	Stop / Hold
	>> / Tune+
	Red / Netflix / Search
	Zoom / Size
	Green / APP / Repeat

Original	Sustituto
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random

