

 

 

 



 

 
 
 

 







 





 
 





 
 




Original	Sustituto
 Power	 Power
 Source	 AV
 Sleep	 Sleep
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--	 Shift + Guide
 Recall	 Pre Ch
 Up	 Up

Original	Sustituto
 CH+	 Ch +
 CH-	 Ch -
 Down	 Down
 Right	 Right
 Left	 Left
 Vol-	 Vol -
 Vol+	 Vol +
 Enter	 Ok
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 Info	 Info
 EPG	 Guide
 Menu	 Menu
 Nicam	 Media
 FAV+	 >>





Original	Sustituto
FAV-	<<
TXT	REPEAT TEXT
EDITOR/GROUP	SETTINGS OPT
INDEX	RETURN BACK
LANG/AUDIO	SOUND DUAL
TV/RADIO	SEARCH TV/R
SUBTITLE	AD SUBT
SUBPAGE	SHIFT + AD SUBT
SIZE	PICTURE FORMAT
HOLD	ECO 3D
STILL	CLEAR EXIT
P.MODE	SHIFT + PICTURE FORMAT
S.MODE	SHIFT + SOUND DUAL

Original	Sustituto

