



 

 

 



 





 











 

 





Original	Sustituto
 Power	 Power
 Tv/Radio	 TV/Radio /
 Subtitle	 Subtitle / EQ
 *	 D.Menu / Top
 Cable	 AV / Input / RDS
 1	 1
 Live Zoom	 Zoom / Size
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 List	 Smart / List
 Search	 Display / Media

Original	Sustituto
 Guide	 Guide / EPG / -/-
 0/Quick Access	 0
 Info	 Info / Angle
 Vol+	 Vol+
 Vol-	 Vol-
 Mute	 Mute / Dimmer
 P+	 CH+ / Page+
 P-	 CH- / Page-
 Home	 Menu / Home
 Back	 Back / Return
 Exit	 Exit / Cancel / Clear
 Text	 Text / Goto
 Up	 Up
 Netflix	 Shift + Red / Netflix /
 Down	 Down
 Amazon	 Shift + Blue / Prime
 Right	 Right





Original	Sustituto	Original	Sustituto
T.Opt/Magic Link	Setup / OPT /		
Left	Left		
OK	OK		
AD	Audio / Lang I/II		
Rec	Rec / Rec Mode		
<<	<< / Tune-		
Play	Play / Slow		
Pause	Pause / Step / Freeze		
>>	>> / Tune+		
Red	Red / Netflix / Search		
Green	Green / APP / Repeat		
Stop/Line Tv	Stop / Hold		
Yellow	Yellow / YouTube / Repeat		
Blue	Blue / Prime Video / Random		

