 
 


 



 
 

 
 



 

 

 
 

 





 




 

 

 
 
 
 


 




	Original	Sustituto		Original	Sustituto
	 Power	 Power		 I<</UP	 Ch +
	 Tv-Out	 AV		 >>/Dn	 Ch -
	 1	 1		 Stop	 Stop
	 2	 2		 >I/Player	 Yellow
	 3	 3		 >>/FF	 I<<
	 4	 4		 <</REW	 Green
	 5	 5		 Enter	 Ok
	 6	 6		 Up	 Up
	 7	 7		 Down	 Down
	 8	 8		 Right	 Right
	 9	 9		 Left	 Left
	 0	 0		 Display	 Info
	 Subtitle	 Subt		 Zoom	 Shift + Eject
	 Menu	 Menu		 Setup	 Options
	 Audio	 Dual		 Rotate	 Back
	 Vol+	 Vol +		 Repeat	 Text
	 Vol-	 Vol -		 Mute	 Mute





Original	Sustituto	Original	Sustituto
S-Time	Sleep		
S-Mode	Guide		
DVD	TV/R		
Slideshow	Pre Ch		
Goto	Eject		
Red/Movie	Rec		
Blue/Music	>>		
Green/Photo	<<		
Yellow/File	Play		

