 
 

 

 

 
 
 
 

 






 

 

 

 
 




 
 
 



Original	Sustituto
	Power
	Source
	Top Menu
	Disc Menu
	Smart TV
	Bluetooth
	Home
	[≡]
	OK
	Up
	Down
	Left
	Right
	Red
	Green
	Yellow
	Blue

Original	Sustituto
	Open/Close
	Return
	III
	Play
	Stop
	Pause
	<<
	>>
	I<
	>I
	Vol+
	Vol -
	Mute
	1
	2
	3
	4





Original		Sustituto		Original		Sustituto	
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	0		0				
	Subtitle		Subt				
	Audio		Dual				

