




Original	Sustituto
 Open/Close	 Eject / Surround
 Input Select	 AV / Input / RDS
 HDMI	 Shift + 0
 Standby	 Power
 1	 1
 2	 2
 3	 3
 Prog+	 CH+ / Page+
 4	 4
 5	 5
 6	 6
 Prog-	 CH- / Page-
 7	 7
 8	 8
 9	 9
 Timer Prog	 Sleep / Timer
 Setup	 Setup / OPT /

Original	Sustituto
 0	 0
 Clear	 Exit / Cancel / Clear
 [i+]/Info	 Info / Angle
 Text	 Text / Goto
 Variable Replay	 Vol+
 Variable Skip	 Vol-
 Guide	 Guide / EPG / -/-
 Top Menu	 D.Menu / Top
 Disc Menu	 Menu / Home
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Display	 Display / Media
 Down	 Down
 Return	 Back / Return
 Red	 Red / Netflix / Search





Original	Sustituto	Original	Sustituto
 Green	 Green / APP / Repeat	 Rec	 Rec / Rec Mode
 Yellow/Mode	 Yellow / YouTube / Repeat	 Subtitle	 Subtitle / EQ
 Blue/Search	 Blue / Prime Video / Random	 1.3x/0.8x PLY	 Shift + Play /
 Blue/Search	 Shift + Red / Netflix /	 O)/Audio	 Audio / Lang I/II
 <<	 << / Tune-	 Sat Link	 Smart / List
 Play	 Play / Slow		
 >>	 >> / Tune+		
 I<<	 I<< / Preset-		
 Stop	 Stop / Hold		
 >>I	 >>I / Preset+		
 Pause	 Pause / Step / Freeze		
 VCR	 Shift + 4		
 HDD	 Shift + 7		
 DVD	 Shift + 2		
 Time Slip	 TV/Radio /		
 Dubbing	 Picture / Format		
 Rec Mode	 Shift + Rec / Rec Mode		

