











 

 

















Original	Sustituto
 Power	 Power
 Source	 AV / Input / RDS
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 TV	 TV/Radio /
 0	 0
 Recall	 Shift + Back / Return
 Vol+	 Vol+
 Mute	 Mute / Dimmer
 PR+	 CH+ / Page+

Original	Sustituto
 Vol-	 Vol-
 World/Internet	 Smart / List
 PR-	 CH- / Page-
 Menu	 Menu / Home
 Q.Menu	 D.Menu / Top
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 Back	 Back / Return
 Exit	 Exit / Cancel / Clear
 i	 Info / Angle
 Camera/Music/Ph	 Picture / Format
 Guide	 Guide / EPG / -/-
 */o	 Shift + Guide / EPG / -/-
 */o..	 Fav / Marker / PC





	Original	Sustituto	Original	Sustituto
	[≡]/Text	 GOTO TEXT		
	Red	 NETFLIX SEARCH		
	Green	 APP REPEAT		
	Yellow	 YouTube REPEAT A-B		
	Blue	 Prime Video RANDOM		
	Lang	 LANG I/II AUDIO		
	[≡]..	 SHIFT + GOTO TEXT		
	[-o-]	 OPT-TOOLS SETUP		
	<<	 TUNE-		
	Pause	 STEP-FREEZE		
	>>	 TUNE+		
	Rec	 REC MODE		
	Play	 SLOW		
	Stop	 HOLD		

