 




 

 

 

 


 


 

 







 
 
 

 




Original	Sustituto
 Power	 Power
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Recall	 Pre Ch
 Audio/Nicam	 Dual
 Display	 Shift + Info
 Exit	 Exit
 Auto	 Smart

Original	Sustituto
 Tv Menu	 Menu
 -/--	 Shift + Guide
 Guide	 Guide
 Source	 AV
 Enter	 Ok
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 CH-	 Ch -
 CH+	 Ch +
 Vol-	 Vol -
 Vol+	 Vol +
 Text	 Text
 <<	 <<
 >>	 >>
 Hold	 Options





Original	Sustituto
Index	Info
I<<	I<<
Size	Format
>>I	>>I
Play/Pause	Play
Stop/Subpage	Stop
Zoom/Reveal	3D
Sleep	Sleep
Rec	Rec
Media	Media
Repeat/FAV-	Shift + Text
FAV	Shift + Pre Ch
FAV+	Shift + AV
Subtitle	Subt
Tv/Radio	TV/R
Red	Red
Green	Green

Original	Sustituto
Yellow	Yellow
Blue	Blue
P.Mode	Shift + Format
S.Mode	Shift + Dual

