

 



 



 



 

 

 

 

 

























 





 



 




































Original		Sustituto		Original		Sustituto	
	Power		Power		Vol-		Vol-
	Lang		Sound / Title		OK		OK
	Lang		Shift + Audio / Lang I/II		Right		Right
	Search		Red / Netflix / Search		Vol+		Vol+
	Memory		D.Menu / Top		Down		Down
	Favorite PR		Fav / Marker / PC		CH-		CH- / Page-
	Game		Picture / Format		Mute		Mute / Dimmer
	Teletext		Text / Goto		Audio		Audio / Lang I/II
	Guide		Shift + Guide / EPG / -/--		1		1
	PR List		Smart / List		2		2
	EPG		Guide / EPG / -/--		3		3
	Info		Info / Angle		Pause		Pause / Step / Freeze
	Menu		Menu / Home		4		4
	Exit		Exit / Cancel / Clear		5		5
	Up		Up		6		6
	CH+		CH+ / Page+		Tv/Radio		TV/Radio /
	Left		Left		7		7





	Original	Sustituto	Original	Sustituto
	8	 8		
	9	 9		
	Sleep	 Sleep / Timer		
	0	 0		
	P/N	 Setup / OPT /		
	Recall	 Back / Return		
	TV/AV	 AV / Input / RDS		
	-	 I<< / Preset-		
	+	 >>I / Preset+		
	-/--	 +  Shift + 0		
	Mode	 Display / Media		

