







 






 




















Original	Sustituto
 Open/Close	 Eject / Surround
 Power	 Power
 Dig.Out	 AV / Input / RDS
 Dig.Out	 Shift + 1
 USB	 Shift + 8
 USB	 Shift + 2
 Disc	 Shift + 3
 S.Mode	 Sound / Title
 Filter	 Setup / OPT /
 Display	 Display / Media
 Program	 TV/Radio /
 Random	 Blue / Prime Video / Random
 Time	 Sleep / Timer
 Clear	 Exit / Cancel / Clear
 Repeat	 Green / APP / Repeat
 Text	 Text / Goto
 AMS	 Smart / List

Original	Sustituto
 Input Up	 CH+ / Page+
 Mute	 Mute / Dimmer
 Vol+	 Vol+
 Input Down	 CH- / Page-
 Enter	 OK
 Vol-	 Vol-
 Folder Down	 Down
 Pause	 Pause / Step / Freeze
 Folder Up	 Up
 I<<	 I<< / Preset-
 Play	 Play / Slow
 >>I	 >>I / Preset+
 <<	 << / Tune-
 Stop	 Stop / Hold
 >>	 >> / Tune+
 1	 1
 2	 2





Original	Sustituto	Original	Sustituto
3	3	CD - STB	3
4	4	VIDEO	4
5	5	TAPE	5
6	6	TUNER	6
7	7	AUX - HDD	7
8	8	USB	8
9	9	BLUETOOTH	9
MENU	Menu	HOME MENU	Menu / Home
0	0	HDMI - BAT	0

