 

 









 




 
 




Original	Sustituto
 Power	 Power
 Source	 AV
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 PR+	 Ch +
 PR-	 Ch -
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0

Original	Sustituto
 TV	 TV/R
 Recall	 Pre Ch
 World	 Media
 Menu	 Menu
 Exit	 Exit
 Back	 Back
 i/Info	 Info
 Guide	 Guide
 [≡]/Text	 Text
 */O	 Format
 */O..	 3D
 Lang	 Dual
 [≡]..	 Subt
 [-O-]	 Options
 Red	 Red
 Green	 Green
 Yellow	 Yellow





Original	Sustituto	Original	Sustituto
	Blue		Blue
	Rec		Rec
	Play		Play
	Stop		Stop
	Pause		Pause
	<<		<<
	>>		>>
	OK		Ok
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Music/Photo/Movi		Smart
	Q.Menu		D. Menu

