



| Original | Sustituto |
|------------|----------------------------|
| Power | Power |
| Tv/AV | AV / Input / RDS |
| 1 | 1 |
| 2 | 2 |
| 3 | 3 |
| Eject | Eject / Surround |
| 4 | 4 |
| 5 | 5 |
| 6 | 6 |
| Play/Pause | Play / Slow |
| 7 | 7 |
| 8 | 8 |
| 9 | 9 |
| Stop | Stop / Hold |
| 0 | 0 |
| -/-- | Shift + Guide / EPG / -/-- |
| Return | Back / Return |

| Original | Sustituto |
|-----------|---------------------|
| Mute | Mute / Dimmer |
| Vol- | Vol- |
| Up | Up |
| CH+ | CH+ / Page+ |
| Vol+ | Vol+ |
| Left | Left |
| OK | OK |
| Right | Right |
| Sys Menu | D.Menu / Top |
| CH- | CH- / Page- |
| Down | Down |
| Display | Display / Media |
| Picture | Picture / Format |
| Sound | Sound / Title |
| Timer | Sleep / Timer |
| Nicam/A2 | Audio / Lang I/II |
| Lan/Prog- | Shift + CH- / Page- |



