



| Original | Sustituto |
|---|---|
|  |  Power |
|  |  Eject / Surround |
|  |  Subtitle / EQ |
|  |  1 |
|  |  2 |
|  |  3 |
|  |  Info / Angle |
|  |  4 |
|  |  5 |
|  |  6 |
|  |  Audio / Lang I/II |
|  |  7 |
|  |  8 |
|  |  9 |
|  |  Display / Media |
|  |  Sleep / Timer |
|  |  Guide / EPG / -/- |

| Original | Sustituto |
|---|---|
|  |  0 |
|  |  Smart / List |
|  |  Sound / Title |
|  |  TV/Radio / |
|  |  Exit / Cancel / Clear |
|  |  Setup / OPT / |
|  |  Up |
|  |  Left |
|  |  OK |
|  |  Right |
|  |  Down |
|  |  Back / Return |
|  |  Menu / Home |
|  |  Picture / Format |
|  |  << / Tune- |
|  |  Pause / Step / Freeze |
|  |  Play / Slow |





| Original | Sustituto |
|----------|---|
| | PRESET+ >>I / Preset+ |
| | TUNE+ >> / Tune+ |
| | HOLD Stop / Hold |
| | PRESET- I<< / Preset- |
| | SIZE ZOOM Zoom / Size |
| | SHIFT + STEP-FREEZE II Shift + Pause / Step / |
| | SHIFT + SLOW Shift + Play / |
| | + VOL Vol+ |
| | DIMMER MUTE Mute / Dimmer |
| | SHIFT + CO- STB 3 Shift + 3 |
| | TOP MENU D.MENU D.Menu / Top |
| | VOL - Vol- |
| | NETFLIX SEARCH Red / Netflix / Search |
| | Prime Video RANDOM Blue / Prime Video / Random |
| | YouTube REPEAT A-B Yellow / YouTube / Repeat |
| | APP REPEAT Green / APP / Repeat |

| Original | Sustituto |
|----------|-----------|
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

