 

 



 



 



 



 



 







 



 

 

 

 































Original	Sustituto	Original	Sustituto
 Power	 Power	 0	 0
 [=]	 Text / Goto	 Source	 AV / Input / RDS
 [=?]	 D.Menu / Top	 ATV	 Shift + Smart / List
 [...]	 Subtitle / EQ	 DTV	 Shift + Display / Media
 [=+]	 Eject / Surround	 EPG	 Guide / EPG / -/-
 [=o]	 Sound / Title	 Radio	 TV/Radio /
 [=♦]	 Zoom / Size	 I/II/I+II/▼/O	 Audio / Lang I/II
 1	 1	 Vol+	 Vol+
 2	 2	 P+	 CH+ / Page+
 3	 3	 P.Info	 Display / Media
 4	 4	 Mute	 Mute / Dimmer
 5	 5	 Vol-	 Vol-
 6	 6	 P-	 CH- / Page-
 7	 7	 [i+]	 Info / Angle
 8	 8	 [<>]	 Picture / Format
 9	 9	 Sleep	 Sleep / Timer
 Recall	 Fav / Marker / PC	 AV Mode	 Shift + AV / Input / RDS





Original	Sustituto
	Menu / Home
	Up
	Left
	OK
	Right
	Exit / Cancel / Clear
	Down
	Back / Return
	Red / Netflix / Search
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random
	Smart / List
	Shift + Power
	<< / Tune-
	Play / Slow
	>> / Tune+

Original	Sustituto
	Setup / OPT /
	Rec / Rec Mode
	Shift + Stop /
	Stop / Hold

