



POWER DIMMER MUTE SHIFT
 TV DVD SAT AUX
 SLOW STEP-FREEZE HOLD REC MODE
 TUNE- TUNE+ PRESET- PRESET+
 TITLE LANG VIII EQ SURROUND
 SOUND AUDIO SUBTITLE
 FORMAT SIZE TIMER PROGRAM
 PICTURE ZOOM SLEEP TV RADIO
 TOP MENU OPT-TOOLS GOTO RDS
 D.MENU SETUP TEXT AV INPUT
 HOME ANGLE
 MENU INFO
 CLEAR RETURN
 EXIT BACK
 CANCEL
 + LIST +
 VOL SMART CH
 — MEDIA PAGE
 — DISPLAY —
 TV DVD CD-STD
 1 2 3
 VIDEO TAPE TUNER
 4 5 6
 AUX-HDD USB BLUETOOTH
 7 8 9
 -- HDMI-BAT PC
 GUIDE 0 FAV
 EPG MARKER
 NETFLIX APP YouTube Prime Video
 SEARCH REPEAT REPEAT A-B RANDOM
 Mandis
 shop
 www.mandis.tv