



Original	Sustituto	Original	Sustituto
 Power	 Power	 Rec	 Rec / Rec Mode
 Source	 AV / Input / RDS	 <<	 << / Tune-
 1	 1	 Stop	 Stop / Hold
 2	 2	 Play	 Play / Slow
 3	 3	 Pause	 Pause / Step / Freeze
 4	 4	 >>	 >> / Tune+
 5	 5	 Vol+	 Vol+
 6	 6	 P+	 CH+ / Page+
 7	 7	 Mute	 Mute / Dimmer
 8	 8	 Vol-	 Vol-
 9	 9	 P-	 CH- / Page-
 -/--	 Shift + Guide / EPG / -/--	 Menu	 Menu / Home
 0	 0	 Exit	 Exit / Cancel / Clear
 PRE-CH	 Fav / Marker / PC	 Up	 Up
 Tv/DTV	 TV/Radio /	 Left	 Left
 CH.List	 Smart / List	 Enter/OK	 OK
 D.Menu	 D.Menu / Top	 Right	 Right

Original	Sustituto	Original	Sustituto
 Power	 Power	 Rec	 Rec / Rec Mode
 Source	 AV / Input / RDS	 <<	 << / Tune-
 1	 1	 Stop	 Stop / Hold
 2	 2	 Play	 Play / Slow
 3	 3	 Pause	 Pause / Step / Freeze
 4	 4	 >>	 >> / Tune+
 5	 5	 Vol+	 Vol+
 6	 6	 P+	 CH+ / Page+
 7	 7	 Mute	 Mute / Dimmer
 8	 8	 Vol-	 Vol-
 9	 9	 P-	 CH- / Page-
 -/--	 Shift + Guide / EPG / -/--	 Menu	 Menu / Home
 0	 0	 Exit	 Exit / Cancel / Clear
 PRE-CH	 Fav / Marker / PC	 Up	 Up
 Tv/DTV	 TV/Radio /	 Left	 Left
 CH.List	 Smart / List	 Enter/OK	 OK
 D.Menu	 D.Menu / Top	 Right	 Right



