
 








Original	Sustituto	Original	Sustituto
Power	Power	Info	Info
DTV/VCR	Smart	Menu	Menu
Mute	Mute	EPG	Guide
1	1	Exit	Exit
2	2	OK	Ok
3	3	Up	Up
4	4	Down	Down
5	5	Right	Right
6	6	Left	Left
7	7	CH+	Ch +
8	8	CH-	Ch -
9	9	Vol+	Vol +
0	0	Vol-	Vol -
FAV	Pre Ch	Text	Text
Recall	Back	Pause	Pause
Audio	Dual	Red	Red
Subtitle	Subt	Green	Green





Original	Sustituto	Original	Sustituto
 Yellow	 Yellow		
 Blue	 Blue		
 Tv/Radio	 TV/R		

