



Original	Sustituto
Standby	Power
Mute	Mute / Dimmer
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
-/-	+  Shift + Guide / EPG / -/-
Recall	Back / Return
Vol+	Vol+
I/II/Audio	Audio / Lang I/II
Auto	Smart / List

Original	Sustituto
CH+	CH+ / Page+
Vol-	Vol-
Display	Display / Media
CH-	CH- / Page-
Up	Up
Left	Left
OK/Enter	OK
Right	Right
Menu	Menu / Home
Down	Down
Exit	Exit / Cancel / Clear
Source	AV / Input / RDS
P.Mode	Picture / Format
S.Mode	Sound / Title
Sleep	Sleep / Timer
Play/Pause / Size	Zoom / Size
Play/Pause / Size	Play / Slow



