

 





 









 

 

 

 

 

 

 



 

 

 

 



 

 

 
 

 
 
 

 
 

 

 






Original	Sustituto
 Power	 Power
 CH List	 Display / Media
 Source	 AV / Input / RDS
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 TTX/MIX	 Text / Goto
 Pre-CH	 Fav / Marker / PC
 Vol+	 Vol+
 Vol-	 Vol-

Original	Sustituto
 Mute	 Mute / Dimmer
 PR+	 CH+ / Page+
 PR-	 CH- / Page-
 CH List	 Shift + Smart / List
 Smart HUB	 Smart / List
 Menu	 Menu / Home
 Guide	 Guide / EPG / -/--
 Tools	 Setup / OPT /
 Info	 Info / Angle
 Return	 Back / Return
 Exit	 Exit / Cancel / Clear
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 OK
 Red/A	 Red / Netflix / Search





Original	Sustituto	Original	Sustituto
	Green/B		
	Yellow/C		
	Blue/D		
	Search		
	Social TV		
	3D		
	E-Manual		
	P.Size		
	AD/Subt		
	<</ <<		
	Pause		
	>>/>>		
	Rec		
	Play		
	Stop		

