



Original	Sustituto
	Power
	Source
	1
	2
	3
	4
	5
	6
	7
	8
	9
	TV/Radio /
	0
	Recall
	V+
	Mute
	P+

Original	Sustituto
	V-
	World/Internet
	P-
	Menu
	Q.Menu
	Up
	Left
	OK
	Right
	Down
	Back
	Exit
	i
	Music/Camera
	TV Guide
	* / O
	* / Q





	Original	Sustituto	Original	Sustituto
	[≡]/Text	GOTO TEXT		Text / Goto
	Red	NETFLIX SEARCH		Red / Netflix / Search
	Green	APP REPEAT		Green / APP / Repeat
	Yellow	YouTube REPEAT A-B		Yellow / YouTube / Repeat
	Blue	Prime Video RANDOM		Blue / Prime Video / Random
	Lang	LANG I/II AUDIO		Audio / Lang I/II
	[≡]..	TITLE SOUND		Sound / Title
	[-O-]	OPT-TOOLS SETUP		Setup / OPT /
	<<	TUNE- ◀		<< / Tune-
	Pause	STEP-FREEZE 		Pause / Step / Freeze
	>>	TUNE+ ▶		>> / Tune+
	Rec	REC MODE		Rec / Rec Mode
	Play	SLOW ▶		Play / Slow
	Stop	HOLD ■		Stop / Hold

