



Original	Sustituto
	Power
	Source
	1
	2
	3
	4
	5
	6
	7
	8
	9
	TV
	0
	Recall
	V+
	Mute
	P+

Original	Sustituto
	V-
	World/Internet
	P-
	Menu
	Q.Menu
	Up
	Left
	OK
	Right
	Down
	Back
	Exit
	i
	Music/Camera
	TV Guide
	* / O
	* / Q





Original		Sustituto		Original	Sustituto
	[≡]/Text		Text / Goto		
	Red		Red / Netflix / Search		
	Green		Green / APP / Repeat		
	Yellow		Yellow / YouTube / Repeat		
	Blue		Blue / Prime Video / Random		
	Lang		Audio / Lang I/II		
	[≡]..		Sound / Title		
	[-O-]		Setup / OPT /		
	<<		<< / Tune-		
	Pause		Pause / Step / Freeze		
	>>		>> / Tune+		
	Rec		Rec / Rec Mode		
	Play		Play / Slow		
	Stop		Stop / Hold		

