

 

 

 

 

 

 

 

 
 


 

 

 
 




 



 

 
 
 
 

 


 



 

 

 

 

 
 
 


 
 









Original	Sustituto	Original	Sustituto
 On	 Shift + Power	 Mode	 Format
 Standby	 Power	 CH+	 Ch +
 Sleep	 Sleep	 CH-	 Ch -
 Dimmer	 Smart	 Tuning Up	 Shift + Ch +
 Status	 Options	 Tuning Down	 Shift + Ch -
 Search	 TV/R	 Quick Select 1	 Shift + 1
 BD	 1	 Quick Select 2	 Shift + 2
 Tuner	 2	 Quick Select 3	 Shift + 3
 Band	 3	 Quick Select 4	 Shift + 4
 DVD	 4	 Menu	 Menu
 Dock	 5	 Audio Adjust	 Dual
 Shift	 6	 Vol+	 Vol +
 TV	 7	 Vol-	 Vol -
 Game	 8	 Up	 Up
 SAT/CBL	 9	 Down	 Down
 V.AUX	 0	 Right	 Right
 Memory	 Subt	 Left	 Left



