


 


 



 


 
 


 
 



 














 

 

 
 
 
 
 
 
 

 
 


 


 
 
 
 

 

 


 





Original	Sustituto	Original	Sustituto
 Power	 Power	 Pause	 Pause
 Radio/Input	 AV	 Scan >>	 >>
 1	 1	 << Scan	 <<
 2	 2	 Skip >>	 >>
 3	 3	 I<< Skip	 I<<
 4	 4	 Rec	 Rec
 5	 5	 Vol+	 Vol +
 6	 6	 Vol-	 Vol -
 7	 7	 Mute	 Mute
 8	 8	 Info/Display	 Info
 9	 9	 Home	 Smart
 0	 0	 Return	 Back
 Clear	 Exit	 Disc Menu	 D. Menu
 Repeat	 Text	 Title/PopUp	 List
 Open/Close	 Eject	 Sound Effect	 Dual
 Play	 Play	 Optical	 Options
 Stop	 Stop	 Music ID	 Subt



