





 

 
 
 

 
 
 

 
 
 
 
 

 

 
 
 

 

 





 

 

 

 
 
 

 

 

 
 


 

 

 
 
 

 

 

 





Original		Sustituto		Original		Sustituto	
	Standby		Power		Vol-		Vol -
	Auto		Smart		CH+		Ch +
	Tv/Radio		TV/R		CH-		Ch -
	Mute		Mute		Nicam/A2		Options
	1		1		Aspect		3D
	2		2		Display		Info
	3		3		Up		Up
	4		4		Down		Down
	5		5		Right		Right
	6		6		Left		Left
	7		7		OK		Ok
	8		8		Menu		Menu
	9		9		Exit		Exit
	0		0		Source		AV
	-/--		Shift + Guide		P.Mode		Shift + Format
	Back		Back		S.Mode		Shift + Dual
	Vol+		Vol +		Sleep		Sleep





Original		Sustituto		Original		Sustituto	
	Fav		Pre Ch		Rec		Rec
	Fav-		Shift + Ch -		Stop		Stop
	Fav+		Shift + Ch +		I<<		I<<
	Hold		Shift + AV		I>>		I>>
	EPG		Guide		Red		Red
	Text		Text		Green		Green
	Lang		Dual		Yellow		Yellow
	Subtitle		Subt		Blue		Blue
	Index		List				
	Reveal		Eject				
	Subpage		D. Menu				
	Media		Media				
	Size		Format				
	Play		Play				
	Pause		Pause				
	<<		<<				
	>>		>>				

