

 
 












Original	Sustituto
	Power
	Source
	1
	2
	3
	4
	5
	6
	7
	8
	9
	0
	Guide / EPG / -/--
	Back / Return
	D.Menu / Top
	Menu / Home
	Exit / Cancel / Clear

Original	Sustituto
	Setup / OPT /
	OK
	Up
	Down
	CH+ / Page+
	Right
	Left
	CH- / Page-
	Info / Angle
	Mute / Dimmer
	Vol+
	Vol-
	Text / Goto
	Subtitle / EQ
	Smart / List
	Red / Netflix / Search
	Display / Media





Original	Sustituto
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 O)Lang	 Audio / Lang I/II
 Blue	 Blue / Prime Video / Random

Original	Sustituto

