


 
 
 
 
 
 
 


 

 

 

 
 




 




 






 






 
 
 

 

 
 
 

 
 
 


 
Original	Sustituto
 Power	 Power
 Input 1	 Shift + 1
 Input 2	 Shift + 2
 Input 3	 Shift + 3
 Input 4	 Shift + 4
 Input 5	 Shift + 5
 PC	 Smart
 HMG	 Media
 [i+]/Timer/Info	 Info
 [ - ]	 3D
 [↔]	 Format
 [←]	 Pre Ch
 CTRL HDMI	 AV
 1	 1
 2	 2
 3	 3
 4	 4

Original	Sustituto
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 EPG/DVD Top Menu/Guide	 Guide
 TV/DTV/SAT	 TV/R
 P+	 Ch +
 P-	 Ch -
 Vol+	 Vol +
 Vol-	 Vol -
 Enter	 Ok
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left









 
 




 
 



 
 


 
 
 

 
Original	Sustituto
	
Exit	Exit
	
Tools	Options
	
Home	Menu
	
Return	Back
	
Mute	Mute
	
CH Return	D. Menu
	
Red	Red
	
Green	Green
	
Yellow	Yellow
	
Blue	Blue
	
Rec	Rec
	
Pause	Pause
	
Stop	Stop
	
Play	Play
	
I<<<	I<<<
	
[...]	Subt
	
>>>I	>>>I

Original	Sustituto
	
[≡?]	Eject
	
<<	<<
	
>>	>>
	
[≡i]	List
	
[≡]	Text
	
[ - ]DVD/[+]	Shift + Options
	
[<>]/HDD	Shift + Format
	
I-II	Dual









 


 
 
 

 



 



 


 
 
 

 

 





 
 

 

 
 

 

 



 


 
Original	Sustituto
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 EPG/DVD Top Menu/Guide	 Guide
 Menu/Home	 Menu
 Return	 Back
 Enter	 Ok
 Up	 Up
 Down	 Down

Original	Sustituto
 Right	 Right
 Left	 Left
 Pause	 Pause
 Stop	 Stop
 Play	 Play
 I<<	 I<<
 >>I	 >>I
 <<	 <<
 >>	 >>
 Vol+ Tv	 Vol +
 Vol- Tv	 Vol -
 Mute Tv	 Mute





Original	Sustituto
 Power	 Power
 [i+]/Timer/Info	 Info
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 EPG/DVD Top Menu/Guide	 Guide
 P+	 Ch +
 P-	 Ch -
 X/Exit	 Exit
 Menu/Home	 Menu

Original	Sustituto
 Return	 Back
 OK	 Ok
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Vol+ Tv	 Vol +
 Vol- Tv	 Vol -
 Mute Tv	 Mute



