

















 

 
 
 

















 





 

 



 



 



 



Original	Sustituto		
	Power		Power
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze
	Rec		Rec / Rec Mode
	<<		<< / Tune-
	Play		Play / Slow
	>>		>> / Tune+
	[[/]]		Zoom / Size
	*		D.Menu / Top
	[<>]		Picture / Format
	Tv Guide		Guide / EPG / -/-
	Search		Shift + Red / Netflix / Search
	Sources		AV / Input / RDS
	Smart Tv		Smart / List
	Home		Menu / Home
	Exit/Tv		Exit / Cancel / Clear
	Red		Red / Netflix / Search

Original	Sustituto		
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	i+/Info		Info / Angle
	Options		Setup / OPT /
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Back		Back / Return
	Down		Down
	Multiview		Display / Media
	Vol+		Vol+
	List		Shift + Smart / List
	CH+		CH+ / Page+
	Vol-		Vol-
	Mute		Mute / Dimmer





Original	Sustituto	Original	Sustituto
 CH-	 CH / Page-		
 1	 1		
 2	 2		
 3	 3		
 4	 4		
 5	 5		
 6	 6		
 7	 7		
 8	 8		
 9	 9		
 Subtitle	 Subtitle / EQ		
 0	 0		
 Text	 Text / Goto		

