



 


 
 

 
 


 
 
 



 

 
 
 

 
 
 


 
 


 
 

 
 



 
 

 
 
 

 
 
 


 
 

 
 
 

 
 









Original	Sustituto	Original	Sustituto
 Open/Close	 Eject / Surround	 0	 0
 HDD	 Shift + 7	 Clear	 Exit / Cancel / Clear
 DVD	 Shift + 2	 TV/DVD	 TV/Radio /
 Power	 Power	 Subtitle	 Subtitle / EQ
 1	 1	 Angle	 Shift + Info / Angle
 2	 2	 [≡]	 Text / Goto
 3	 3	 Menu	 Menu / Home
 Prog+	 CH+ / Page+	 Red	 Red / Netflix / Search
 4	 4	 Green	 Green / APP / Repeat
 5	 5	 Yellow	 Yellow / YouTube / Repeat
 6	 6	 Blue	 Blue / Prime Video / Random
 Prog-	 CH- / Page-	 System Menu	 Setup / OPT /
 7	 7	 Title List / Top Menu	 D.Menu / Top
 8	 8	 Guide	 Guide / EPG / -/-
 9	 9	 Timer	 Sleep / Timer
 Input	 AV / Input / RDS	 Up	 Up
 Audio	 Audio / Lang I/II	 Info	 Info / Angle





Original	Sustituto	Original	Sustituto
	Left		Left
	Enter		OK
	Right		Right
	Exit / Return		Back / Return
	Down		Down
	Display		Display / Media
	I<< / Page-		I<< / Preset-
	←		Shift + Left
	→		Shift + Right
	>>I / Page +		>>I / Preset+
	<< / <II / <I / Day-		<< / Tune-
	Play		Play / Slow
	Day + / I> / II> / >>		>> / Tune+
	TV Pause		Shift + Pause / Step / Step /
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	Rec		Rec / Rec Mode
	Rec Stop		Shift + Stop /
	DUB /HDD/DVD		Shift + 8
	Rec Mode		Shift + Rec / Rec Mode
	Zoom		Zoom / Size
	Vol+ Tv		Vol+
	Prog + Tv		Shift + CH+ /
	Power Tv		Shift + Power
	Play Mode		Smart / List
	Vol - Tv		Vol-
	Prog - Tv		Shift + CH- /
	Input Tv		Shift + AV / Input / RDS



 



 

 





 

 

 

 

 
 
 

 

 



 





Original	Sustituto
 Open/Close	 Eject / Surround
 HDD	 Shift + 7
 DVD	 Shift + 2
 Power	 Power
 1	 1
 2	 2
 3	 3
 Prog+	 CH+ / Page+
 4	 4
 5	 5
 6	 6
 Prog-	 CH- / Page-
 7	 7
 8	 8
 9	 9
 Input	 AV / Input / RDS
 Audio	 Audio / Lang I/II

Original	Sustituto
 0	 0
 Clear	 Exit / Cancel / Clear
 TV/DVD	 TV/Radio /
 Subtitle	 Subtitle / EQ
 Angle	 Shift + Info / Angle
 [≡]	 Text / Goto
 Menu	 Menu / Home
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 System Menu	 Setup / OPT /
 Title List / Top Menu	 D.Menu / Top
 Guide	 Guide / EPG / -/-
 Timer	 Sleep / Timer
 Up	 Up
 Info	 Info / Angle







 


 
 

 
 


 
 
 



 

 
 
 

 

 


 
 


 
 

 
 



 
 

 
 
 

 
 
 


 
 

 
 
 

 
 

 




Original	Sustituto
 Left	 Left
 Enter	 OK
 Right	 Right
 Exit / Return	 Back / Return
 Down	 Down
 Display	 Display / Media
 I<< / Page-	 I<< / Preset-
 ←	 Shift + Left
 →	 Shift + Right
 >>I / Page +	 >>I / Preset+
 << / <II / <I / Day-	 << / Tune-
 Play	 Play / Slow
 Day + / I> / II> / >>	 >> / Tune+
 TV Pause	 Shift + Pause / Step / Step /
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 Rec	 Rec / Rec Mode

Original	Sustituto
 Rec Stop	 Shift + Stop /
 DUB /HDD/DVD	 Shift + 8
 Rec Mode	 Shift + Rec / Rec Mode
 Zoom	 Zoom / Size
 Vol+ Tv	 Vol+
 Prog + Tv	 Shift + CH+ /
 Power Tv	 Shift + Power
 Play Mode	 Smart / List
 Vol - Tv	 Vol-
 Prog - Tv	 Shift + CH- /
 Input Tv	 Shift + AV / Input / RDS





 





 





 







 



 









Original	Sustituto	Original	Sustituto
 Open/Close	 Eject / Surround	 0	 0
 HDD	 Shift + 7	 Clear	 Exit / Cancel / Clear
 DVD	 Shift + 2	 TV/DVD	 TV/Radio /
 Power	 Power	 Subtitle	 Subtitle / EQ
 1	 1	 Angle	 Shift + Info / Angle
 2	 2	 [≡]	 Text / Goto
 3	 3	 Menu	 Menu / Home
 Prog+	 CH+ / Page+	 Red	 Red / Netflix / Search
 4	 4	 Green	 Green / APP / Repeat
 5	 5	 Yellow	 Yellow / YouTube / Repeat
 6	 6	 Blue	 Blue / Prime Video / Random
 Prog-	 CH- / Page-	 System Menu	 Setup / OPT /
 7	 7	 Title List / Top Menu	 D.Menu / Top
 8	 8	 Guide	 Guide / EPG / -/-
 9	 9	 Timer	 Sleep / Timer
 Input	 AV / Input / RDS	 Up	 Up
 Audio	 Audio / Lang I/II	 Info	 Info / Angle





Original	Sustituto
 Left	 Left
 Enter	 OK
 Right	 Right
 Exit / Return	 Back / Return
 Down	 Down
 Display	 Display / Media
 I<< / Page-	 I<< / Preset-
 ←	 Shift + Left
 →	 Shift + Right
 >>I / Page +	 >>I / Preset+
 << / <II / <I / Day-	 << / Tune-
 Play	 Play / Slow
 Day + / I> / II> / >>	 >> / Tune+
 TV Pause	 Shift + Pause / Step / Step /
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 Rec	 Rec / Rec Mode

Original	Sustituto
 Rec Stop	 Shift + Stop /
 DUB /HDD/DVD	 Shift + 8
 Rec Mode	 Shift + Rec / Rec Mode
 Zoom	 Zoom / Size
 Vol+ Tv	 Vol+
 Prog + Tv	 Shift + CH+ /
 Power Tv	 Shift + Power
 Play Mode	 Smart / List
 Vol - Tv	 Vol-
 Prog - Tv	 Shift + CH- /
 Input Tv	 Shift + AV / Input / RDS

