








Original	Sustituto
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 *(Left)	 Shift + Left
 0	 0
 *(Right)	 Shift + Right
 []/Picture	 Picture / Format
 /Sound	 Sound / Title
 I-II	 Audio / Lang I/II

Original	Sustituto
 Menu	 Menu / Home
 Up/PR+	 Up
 PR+	 CH+ / Page+
 List	 Smart / List
 Vol-	 Vol-
 Left	 Left
 OK	 OK
 Right	 Right
 Vol+	 Vol+
 Sleep	 Sleep / Timer
 Down/PR-	 Down
 PR-	 CH- / Page-
 P<P	 Back / Return
 Tv/AV	 AV / Input / RDS
 Tv/PC	 TV/Radio /
 [<>]/ARC	 Shift + Picture / Format
 Red	 Red / Netflix / Search





Original	Sustituto
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random
	Text / Goto
	Shift + Text / Text /
	Zoom / Size
	Info / Angle
	Rec / Rec Mode
	Pause / Step / Freeze
	Play / Slow
	Stop / Hold
	Display / Media
	Shift + AV / Input / RDS
	Shift + Back / Return
	Shift + CH+ /
	Shift + Display / Media
	Shift + Smart / List

Original	Sustituto
	Shift + Down
	Shift + CH- /

