



Original	Sustituto
	Power
	Guide
	Tv Input
	AV Input
	Menu
	Text
	[≡♦]/STTL
	[+]/Aspect
	i
	Exit
	Netflix
	APPS
	Left
	Up
	Right
	Home
	OK

Original	Sustituto
	Option
	Down
	Back/Return
	Red
	Green
	Yellow
	Blue
	Vol+
	Mute
	PR+
	Vol-
	PR-
	1
	2
	3
	4
	5





Original		Sustituto	
	6		6
	7		7
	8		8
	9		9
	?/Help		D.Menu / Top
	0		0
	Last View		Fav / Marker / PC
	<<		<< / Tune-
	Play		Play / Slow
	>>		>> / Tune+
	I<<		I<< / Preset-
	Pause		Pause / Step / Freeze
	>>I		>>I / Preset+
	Stop		Stop / Hold
	Rec		Rec / Rec Mode

Original		Sustituto	

