



 







 



 

 
 

 
 





 
 


 

 

 




Original	Sustituto
 Power	 Power
 Source	 AV
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Tv	 TV/R
 Recall	 Pre Ch
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute

Original	Sustituto
 P+	 Ch +
 P-	 Ch -
 i	 Info
 Menu	 Menu
 Q.Menu	 D. Menu
 Back	 Back
 Exit	 Exit
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 World	 Media
 Music-Photo-Vide	 Options
 Guide	 Guide
 */o	 Format
 */Q	 3D





Original	Sustituto	Original	Sustituto
 Text	 Text		
 Red	 Red		
 Green	 Green		
 Yellow	 Yellow		
 Blue	 Blue		
 Lang.	 Dual		
 [≡]..	 Subt		
 [-o-]	 Smart		
 <<	 <<		
 Pause	 Pause		
 >>	 >>		
 Rec	 Rec		
 Play	 Play		
 Stop	 Stop		

