

 

 


 


 



 


 




 









 

 
 
 
 
 


 
 
 


 

 

 


 

 
 

 
 
 











Original	Sustituto	Original	Sustituto
 Power	 Power	 Pop Up/Menu	 Menu
 Open/Close	 Eject	 <<	 <<
 1	 1	 Play	 Play
 2	 2	 Pause	 Pause
 3	 3	 >>	 >>
 4	 4	 I<<	 I<<
 5	 5	 Stop	 Stop
 6	 6	 >>I	 >>I
 7	 7	 Setting	 Options
 8	 8	 Exit	 Exit
 9	 9	 Step/Slow	 AV
 0	 0	 Up	 Up
 Goto	 Guide	 Down	 Down
 Clear	 Shift + Exit	 Right	 Right
 OSC	 Media	 Left	 Left
 Top Menu	 Shift + Menu	 OK	 Ok
 PIP	 3D	 Return	 Back





	Original	Sustituto	Original	Sustituto
	Home	Smart		
	Red/Program	Red		
	Green/Digest	Green		
	Yellow/Zoom	Yellow		
	Blue/Bookmark	Blue		
	Sub	Subt		
	Audio	Dual		
	2nd. Audio	+  Shift + Dual		
	Angle	Pre Ch		
	A-B	List		
	Repeat	Text		
	Display	Info		

