 

 







 























 










 



 








 





 







Original	Sustituto	Original	Sustituto
	Power		Power
	Source		AV / Input / RDS
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Lang		Audio / Lang I/II
	0		0
	TXT		Text / Goto
	Home		Smart / List
	Home		D.Menu / Top
	Vol+		Vol+
	P+		CH+ / Page+
	Vol-		Vol-
	P-		CH- / Page-
	Mute		Mute / Dimmer
	[G]		Menu / Home
	Up		Up
	i		Info / Angle
	Left		Left
	OK		OK
	Right		Right
	Back		Back / Return
	Down		Down
	Exit		Exit / Cancel / Clear
	<<		<< / Tune-
	Pause		Pause / Step / Freeze
	>>		>> / Tune+
	Rec		Rec / Rec Mode





Original	Sustituto	Original	Sustituto
 Play	 Play / Slow		
 Stop	 Stop / Hold		
 Red	 Red / Netflix / Search		
 Green	 Green / APP / Repeat		
 Yellow	 Yellow / YouTube / Repeat		
 Blue	 Blue / Prime Video / Random		

