
















Original	Sustituto
P100	Display / Media
Power	Power
REV	<< / Tune-
Doub	Audio / Lang I/II
1	1
2	2
3	3
Hold	Stop / Hold
4	4
5	5
6	6
Sub	Subtitle / EQ
Update	D.Menu / Top
7	7
8	8
9	9
Mix	Text / Goto

Original	Sustituto
AV	AV / Input / RDS
0	0
-/--	Guide / EPG / -/--
P+	CH+ / Page+
Up	Up
Mute	Mute / Dimmer
TV/TXT	TV/Radio /
Menu	Menu / Home
Left	Left
Vol-	Vol-
OK	OK
Right	Right
Vol+	Vol+
Swap	Back / Return
P-	CH- / Page-
Down	Down
16:9	Picture / Format





	Original	Sustituto	Original	Sustituto
	Red	 Red / Netflix / Search		
	Green	 Green / APP / Repeat		
	Yellow	 Yellow / YouTube / Repeat		
	Blue	 Blue / Prime Video / Random		
	Violet	 Smart / List		
	[]	 Setup / OPT /		
	♪	 Sound / Title		
	PP	 Shift + Smart / List		

