






 

 









 
 







 
 

 


 
 



 
 



 
 
 



 

 


 



 

 

 

 

 


 

 


 

 






 


Original	Sustituto
 Power	 Power
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 SAT	 AV
 FAV	 Pre Ch
 Menu	 Menu
 EPG	 Guide
 Recall	 Back

Original	Sustituto
 Exit	 Exit
 Up / CH +	 Up
 Down / CH -	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 Vol +	 Vol +
 Vol -	 Vol -
 Page +	 Ch +
 Page -	 Ch -
 Red / TTX	 Red
 Red / TTX	 Text
 Green / SUB.T	 Green
 Green / SUB.T	 Subt
 Yellow / Zoom	 Yellow
 Yellow / Zoom	 Eject
 Blue / MP	 Blue





Original		Sustituto		Original		Sustituto	
	TV / Radio		TV/R				
	Audio		Dual				
	Pause		Pause				
	TV / SAT		Media				
	Rec		Rec				
	P/N		Format				
	Info		Info				
	Pos		Options				
	Play		Play				
	Stop		Stop				
	<<		<<				
	>>		>>				

