



Original	Sustituto	Original	Sustituto
 Digital	 Audio / Lang I/II	 Menu	 Menu / Home
 Power	 Power	 Up	 Up
 Analog	 Sound / Title	 Left / Zoom -	 Left
 Presets	 Display / Media	 OK	 OK
 1	 1	 Right / Zoom +	 Right
 2	 2	 Down	 Down
 3	 3	 Guide	 Guide / EPG / -/-
 4	 4	 Return	 Back / Return
 5	 5	 Info	 Info / Angle
 6	 6	 Vol +	 Vol+
 7	 7	 Mute	 Mute / Dimmer
 8	 8	 PR + / >>I	 CH+ / Page+
 9	 9	 >>I	 >>I / Preset+
 AV	 AV / Input / RDS	 Vol -	 Vol-
 0	 0	 Text	 Text / Goto
 List	 Smart / List	 PR - / I<<<	 CH- / Page-
 Exit	 Exit / Cancel / Clear	 I<<<	 I<<< / Preset-





Original	Sustituto	Original	Sustituto
 Red	 Red / Netflix / Search		
 Green	 Green / APP / Repeat		
 Yellow	 Yellow / YouTube / Repeat		
 Blue	 Blue / Prime Video / Random		
 <<	 << / Tune-		
 Stop	 Stop / Hold		
 Play	 Play / Slow		
 >>	 >> / Tune+		
 Rec	 Rec / Rec Mode		
 Pause	 Pause / Step / Freeze		





Original	Sustituto	Original	Sustituto
	Digital		Audio / Lang I/II
	Power		Menu / Home
	Analog		Up
	Presets		Left
	1		Left / Zoom -
	2		OK
	3		Right
	4		Right / Zoom +
	5		Down
	6		Guide
	7		Return
	8		Info
	9		Vol+
	AV		Mute
	0		PR + / >>I
	List		>>I / Preset+
	Exit		CH+ / Page+
			Vol-
			Text / Goto
			PR - / I<<<
			CH- / Page-
			I<<< / Preset-





Original	Sustituto	Original	Sustituto
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	<<		<< / Tune-
	Stop		Stop / Hold
	Play		Play / Slow
	>>		>> / Tune+
	Rec		Rec / Rec Mode
	Pause		Pause / Step / Freeze

