























Original	Sustituto
	Power
	Mute
	1
	2
	3
	4
	5
	6
	7
	8
	9
	-/--
	0
	Recall
	P.Mode
	S.Mode
	Nicam

Original	Sustituto
	Sleep
	Source
	CH+
	Vol+
	Info
	CH-
	Vol-
	Media
	Freeze
	Aspect
	EPG
	Up
	Left
	OK
	Right
	Menu
	Down





Original	Sustituto
 Exit	 Exit / Cancel / Clear
 Text	 Text / Goto
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Stop/Hold	 Stop / Hold
 <<	 << / Tune-
 Size	 Zoom / Size
 >>/Reveal	 >> / Tune+
 I<</Index	 I<< / Preset-
 >>I/Subpage	 >>I / Preset+
 Lang	 Audio / Lang I/II
 Subtitle	 Subtitle / EQ
 Rec	 Rec / Rec Mode
 R.List	 Smart / List
 TV/Radio	 TV/Radio /
 Timeshift	 D.Menu / Top
 Red	 Red / Netflix / Search

Original	Sustituto
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random

