



Original	Sustituto
Power	Power
Input 1	Shift + 1
Input 2	Shift + 2
Input 3	Shift + 3
Input 4	Shift + 4
Input 5	Shift + 5
PC	Shift + Fav / Marker / PC
HMG	Shift + 6
[i+]/Timer/Info	Sleep / Timer
[i+]/Timer/Info	Info / Angle
[TV]	Shift + Red / Netflix /
[←]	Shift + Yellow / YouTube /
[→]	Shift + Green / APP /
CTRL HDMI	Picture / Format
1	1
2	2
3	3

Original	Sustituto
4	4
5	5
6	6
7	7
8	8
9	9
EPG/DVD Top Menu/Info	D.Menu / Top
EPG/DVD Top Menu/Info	Guide / EPG / -/-
0	0
TV/DTV/SAT	AV / Input / RDS
P+	CH+ / Page+
CH return	Fav / Marker / PC
Vol+	Vol+
P-	CH- / Page-
Mute	Mute / Dimmer
Vol-	Vol-
Exit	Exit / Cancel / Clear







 

 

 

 

 

 

 


 

 



 





 



Original	Sustituto
	 Up
	 Setup / OPT /
	 Left
	 OK
	 Right
	 Menu / Home
	 Down
	 Back / Return
	 Red / Netflix / Search
	 Rec / Rec Mode
	 Green / APP / Repeat
	 Pause / Step / Freeze
	 Yellow / YouTube / Repeat
	 Stop / Hold
	 Blue / Prime Video / Random
	 Play / Slow
	 I<< / Preset-

Original	Sustituto
	 Subtitle / EQ
	 >>  / Preset+
	 Shift + Display / Media
	 << / Tune-
	 Shift + Smart / List
	 >> / Tune+
	 Text / Goto
	 Audio / Lang I/II
	 Smart / List
	 Display / Media





Original	Sustituto
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 EPG/DVD Top Menu/Guide	 Guide / EPG / -/-
 EPG/DVD Top Menu/Guide	 D.Menu / Top
 0	 0
 Vol+ Tv	 Vol+
 Mute Tv	 Mute / Dimmer
 Vol- Tv	 Vol-
 Up	 Up

Original	Sustituto
 Left	 Left
 Enter	 OK
 Right	 Right
 Menu/Home	 Menu / Home
 Down	 Down
 Return	 Back / Return
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 Play	 Play / Slow
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 <<	 << / Tune-
 >>	 >> / Tune+







Original	Sustituto
Power	Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
P+	CH+ / Page+
Vol+ Tv	Vol+
P-	CH- / Page-
Mute Tv	Mute / Dimmer
Vol- Tv	Vol-
Rec	Rec / Rec Mode

Original	Sustituto
Pause	Pause / Step / Freeze
Stop	Stop / Hold
Play	Play / Slow
I<<	I<< / Preset-
>>I	>>I / Preset+

